


PROPER SIZING FOR INSULATING RUBBER GLOVES

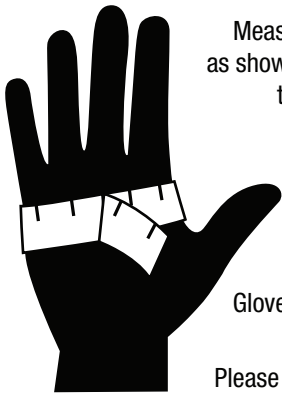

Measure the circumference of the palm, as shown, and add 1" to the measurement to determine the glove size needed.

For example, a measurement of 9" plus the 1" would be 10" and would require a size 10 glove.

Glove Sizes Available: 8, 8.5, 9, 9.5, 10, 10.5, 11 and 12

Please contact Specialized Products if you have questions or would like to check stock.



www.specialized.net

(800) 866-5353